

# USER MANUAL 2023

# TASSLOCK RADBI

Charge the remote with  
USB C type Charger for 2  
hours.

**Do Not use Fast Charger.  
This May damage the  
Battery.**

# TASSLOCK

MILITARY GRADE AUTOMOBILE SECURITY



# Overview

## Key attributes

### Industry-specific attributes

Material	ABS
Warranty	12 Months

### Other attributes

Brand Name	TASSLOCK
Model Number	RADBI
Place of Origin	Made in Taiwan, Assembled in China
Product name	Motorcycle alarm
Remote Controller	2pcs
Key words	Remote Starter Two Way with PKE
Remote code	Learning Code
Siren	105~125dB
Application	DC
Advantage	High Quality
Usage	Motorcycle safety
Feature	Anti-Theft, Automatic Lock & Unlock and many more
Certification	CE

### Packaging & delivery

Selling Units:	Single item
Single package size:	26X18X9 cm (Size may change for different countries)
Single gross weight:	350-400 Gram
Package Type:	Standard Tasslock Paper gift Box




### Warranty policy:

12 months warranty after customer received the goods. If products have quality problem within the warranty period, we promise to repair or replace the defective products. If not in the warranty period, please purchase spare part or whole set to replace. Feel free to call or email me if any problem you have when you sell our security system for motorcycle.




## HOW TO OPERATE THE REMOTE

**Remember: Motorcycle will start after Teeee-Tee-TeeT..... after this sound.**

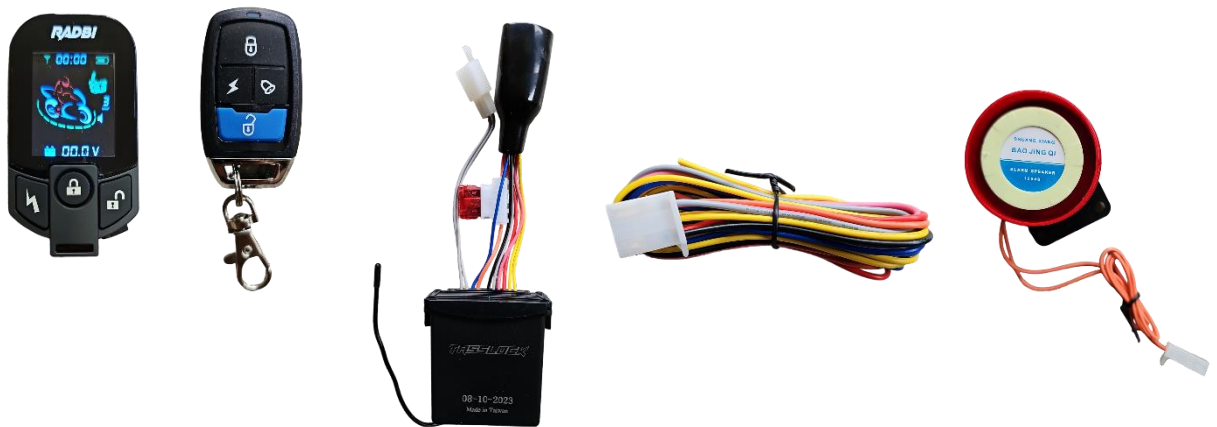






- After Turn off the motorcycle Key, no need to press any button of remote. Motorcycle will lock automatically.
- When you come near (5 Meters+-) to the motorcycle and turn the key on, Motorcycle will sound like Teeeeee- Tee- Teet. And you are ready to start the bike. (No Need to press any key of remote)
- If there is no Teeee-Tee-Teet sound after turn on the key, Press ⚡ button.




## Modes: Manual Lock and Unlock




- To unlock the bike manually, Press  once. Bike will sound Di Di and unlocks. If you press and hold the button  for 1 second and release, bike will unlock silently. (Indicator Light will blink 2 times)
- To lock the bike manually, press  once, and bike will sound. And Alarm will be activated.

## More Modes:

- Press and hold this Lock  button for 1 second and release. Bike indicator will blink once. And the bike will lock silently. If somebody touch and shake the bike, only remote will alarm and vibrates.
- To Reactive the alarm mode from silent mode - Press the Lock button for once.
- Keyless start the bike, Press Power  button twice. And you will hear Teee-Tee-Teet sound.
- If someone Hijack your bike, you just turn off the bike key and ran away. And as soon as possible press the Lock  button. Motorcycle will never start again.
- We must have friends, sometimes they ask for Motorcycle. But you don't want to give them your motorcycle. But you cannot say NO. So, you give your friend the bike key, and tell them to go. You secretly Press and hold the Unlock button  for 2 seconds- and release. Your friend will not realize anything but bike will not start.
- There is a Remote blinker, you can know whether your bike is locked or unlocked. (But normally when you are away from bike, its automatically Locked.
- You have lost your Motorcycle on parking lot. There are thousand of bikes parked. You can easily find your motorcycle by pressing Bell  button.
- When you press Lock or Unlock button from far way and there is no blinker light. That's mean you are out of range. Don't panic. Your bike is locked and alarm mode activated.
- When you are using your Backup Remote. You must press Power  button after turn on the bike key. There will be Teee-Tee-Teet sound.
- In case of Robbery, you just turn off your key and throw the key away and just ran. Bike will automatically lock and alarmed.
- When you are running the bike without key, Press Unlock  once to shut down the engine.



- When you run your bike without key, and hijack happen, just run away from bike and press Lock  button once.

### Extra Modes:

- You can change Vibration Mode (Shake Sensitivity) by remote. There are 5 level Low to High sensitivity modes. Press and hold power  button and press lock  Button 3 times to change Mode 3 (Default). To change Mode 1 press lock 1 time, mode 2 press lock 2 times. To mode 5, press lock 5 times. This way you can change the sensitivity modes. Bike will sound as many times as press lock. So you can be sure about modes.
- **Silent the Remote:** Press and Hold Unlock button for 5 Seconds. Remote will be Silent.
- **Remove Silent from Remote:** Press and Hold Unlock button for 5 seconds, remote will make a vibration. It came back to default mode.
- **Remote Time change:** When your press and hold the LOCK button and press Unlock it will change Minutes. ---- When you press and hold LOCK button and press Power button it will change HOUR.
- **Turn ON Hazard Lights of Motorcycle:** Press and hold Power  button for 5 seocnds.

### Special Modes: (Motorcycle key must be turn on for change the special modes)

- **Turn On Indicator Sound:** Press and hold power button then press Lock 3 times. (Indicator light will blink 3 times)
- **Turn OFF indicator sound:** Press and hold power button then press Lock 4 times. (Indicator light will flash 4 times)
- **Turn ON automatic 3 minutes parking Lock:** Press and hold power button then press Unlock 5 times. (Indicator Light will flash 5 times)
- **Turn OFF automatic 3 minutes parking Lock:** Press and hold power button then press Unlock 6 times. (Indicator light will flash 6 times)
- **Turn ON built in Lock:** Press and hold Power button then press Unlock 7 times. (Indicator Light will flash 7 times:
- **Turn OFF built in Lock:** Press and hold Power button then press Unlock 8 times. (Indicator light will flash 8 times)
- **Turn OFF and ON Remote PKE mode (Automatic Unlock):** Press and hold Power button then Press Unlock 12 times. (Indicator light will flash 12 times)

**Factory RESET Remote and Host:** Press and hold Power  Button then Press Lock   
15 times. (There will be a different musical sound) - The Default Mode on - Automatic  
Lock Unlock Activated.

**Common Faults and Solutions Note:** If you cannot solve the above faults with the solutions given. Then contact the Helpline or Contact the Supplier. Try Reset the Remote first. DO NOT OPEN THE DEVICE OR REMOTE. IT WILL VOID YOUR WARRANTY.  
WWW.TASSLOCK.COM All Rights Reserve

**[www.tasslock.co.uk](http://www.tasslock.co.uk)**

**THANK YOU FOR CHOOSING TASSLOCK**